



12" Balustrade System Baluster Top Rail Radius

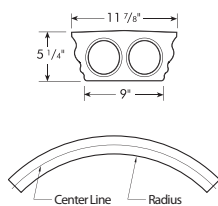

Part Number	Radius	Center Line Length	Baluster Rail Installation Kit* (See Installation Guide Page 38)
BTRR12X48	48"	75" ¹ / ₄ Circle	BRK12
BTRR12X60	60"	94" ¹ / ₄ Circle	BRK12
BTRR12X77	76" ¹ / ₂ "	122" ¹ / ₄ Circle	BRK12
BTRR12X96	96"	120" ¹ / ₆ Circle	BRK12
BTRR12X110	110"	78" ¹ / ₆ Circle	BRK12
BTRR12X126	126"	102" ¹ / ₆ Circle	BRK12
NEW BTRR12X192	192" ¹ / ₂ "	100" (¹ / ₁₂ Circle)	BRK12
BTRR12X247	246" ⁵ / ₁₆ "	98" (¹ / ₁₆ Circle)	BRK12

*Includes hardware to mount top and bottom rail to a baluster:
 (4 qty.) Bear Claw Brackets.
 (4 qty.) ³/₁₆"- 18 Clip Nuts.
 (16 qty.) #12³/₁₆" Pan Head Screws.
 (4 qty.) ³/₁₆"- 18 x5" Hex Head Cap Screws.
 (4 qty.) ³/₁₆" x 1¹/₂" Fender Washers.
 (4 qty.) ¹/₄" x 20x2" Flat Head Self Tapping Screws.

12" Balustrade System Baluster Bottom Rail Radius

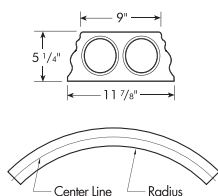

Part Number	Radius	Center Line Length	Baluster Rail Installation Kit* (See Installation Guide Page 38)	Rail Support Block (Page 32 BL)
BBRR12X48	48"	75" ¹ / ₄ Circle	BRK12	RSB4X4X6
BBRR12X60	60"	94" ¹ / ₄ Circle	BRK12	RSB4X4X6
BBRR12X77	76" ¹ / ₂ "	122" ¹ / ₄ Circle	BRK12	RSB4X4X6
BBRR12X96	96"	120" ¹ / ₆ Circle	BRK12	RSB4X4X6
BBRR12X110	110"	78" ¹ / ₆ Circle	BRK12	RSB4X4X6
BBRR12X126	126"	102" ¹ / ₆ Circle	BRK12	RSB4X4X6
NEW BBRR12X192	192" ¹ / ₂ "	100" (¹ / ₁₂ Circle)	BRK12	RSB4X4X6
BBRR12X247	246" ⁵ / ₁₆ "	98" (¹ / ₁₆ Circle)	BRK12	RSB4X4X6

*Includes hardware to mount top and bottom rail to a baluster:
 (4 qty.) Bear Claw Brackets.
 (4 qty.) ³/₁₆"- 18 Clip Nuts.
 (16 qty.) #12³/₁₆" Pan Head Screws.
 (4 qty.) ³/₁₆"- 18 x5" Hex Head Cap Screws.
 (4 qty.) ³/₁₆" x 1¹/₂" Fender Washers.
 (4 qty.) ¹/₄" x 20x2" Flat Head Self Tapping Screws.