 
 




12" Balustrade System Top Rail



BTR12X96	96"	BRK12
BTR12X120	120"	BRK12

*Connects both ends of one 12" Rail to applications.
 (4 qty.) Bear Claw Brackets.
 (16 qty.) #12 ³/₁₆" Pan Head Screws.
 (4 qty.) ³/₁₆"-18 x5" Hex Head Cap Screws.
 (2 qty.) ¹/₄"-20 x2" Flat Head Phillips Thread Cutting Screws.
 (4 qty.) ³/₁₆" Clip Nuts.
 (4 qty.) ¹/₂" O.D. ⁵/₁₆" I.D. ³/₆₄" thick Fender Washers.

 
 
12" Balustrade System Bottom Rail



Part Number	Length	Baluster Rail Installation Kit* (See Installation Guide Page 38)	Rail Support Block (See Below)
BBR12X96	96"	BRK12	RSB4X4X6
BBR12X120	120"	BRK12	RSB4X4X6

*Connects both ends of one 12" Rail to applications.
 (4 qty.) Bear Claw Brackets.
 (16 qty.) #12 ³/₁₆" Pan Head Screws.
 (4 qty.) ³/₁₆"-18 x5" Hex Head Cap Screws.
 (2 qty.) ¹/₄"-20 x2" Flat Head Phillips Thread Cutting Screws.
 (4 qty.) ³/₁₆" Clip Nuts.
 (4 qty.) ¹/₂" O.D. ⁵/₁₆" I.D. ³/₆₄" thick Fender Washers.

12" Balustrade System Rail Support Block

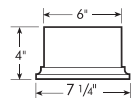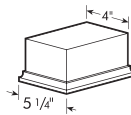

RSB4X4X6

Rail Support Blocks should be placed under the Bottom Rail at a span of every 48" or less. These blocks can be trimmed for height.